
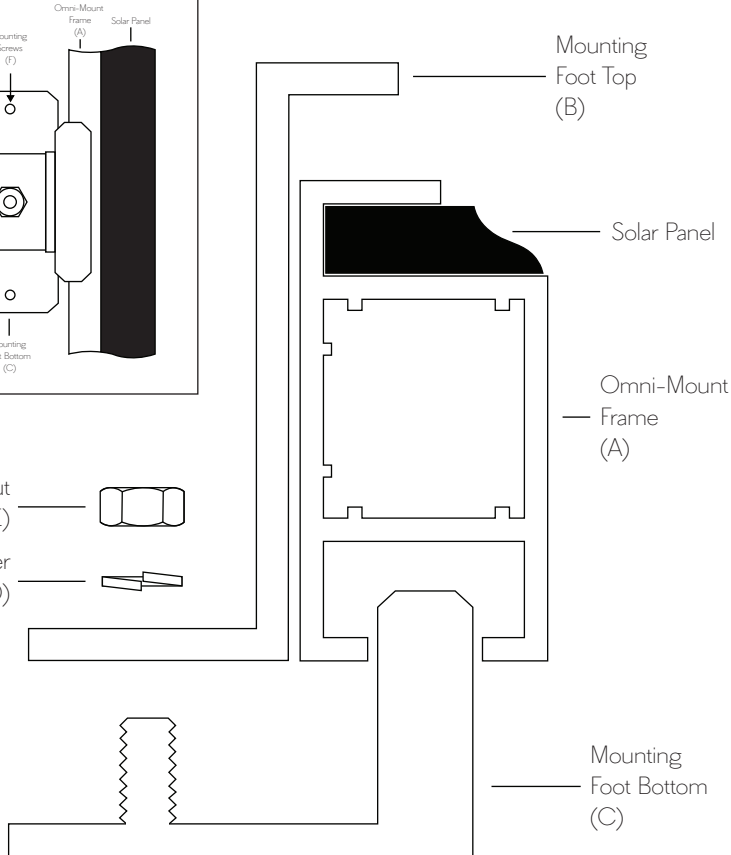
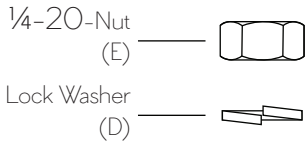


## Top View

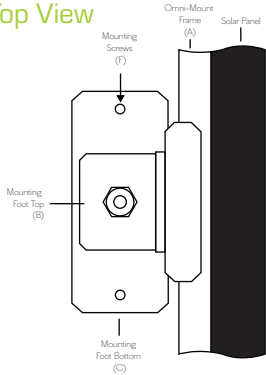

## Included Mounting Foot Components

- B (4) Mounting Foot Top
- C (4) Mounting Foot Bottom
- D (4) Lock Washer
- E (4) 1/4-20 Nuts

## Not Included Components

- Tube of UV Rated Adhesive Sealant
- Drill
- F (8) Mounting Screws (size #8)

## Install Instructions:

1. Find placement for your panel(s) on roof.
2. Install mounting feet to panel by following the diagram.
3. Tighten 1/4-20 nuts to approximately 20 foot lbs of torque.
4. Mark the location of the mounting foot (C) holes on the roof of your RV.
5. Drill holes as indicated by the marks from previous step.
6. Apply a generous amount of sealant to the RV roof where mounting feet and screws will be placed.
7. Place panels and mounting feet over the drilled and sealed areas.
8. Install the mounting screws (C) and let sealant set.
9. Retighten as needed.